

Note that Telco lines and some PBX systems only provide a limited amount of time to program the phone before the line tells the phone to hang-up. See page 2 for a programming template and tips to assist in programming the phone in these situations.

### Step 1: Plug the phone line from the phone into the phone jack.

### Step 2: Program Emergency Numbers


- Press the red **ON/OFF** key, then slide S15 to ON / Prog (see photo below)
- To program first emergency number: Press **1**, \*, (key in the phone number), press the **VOL** key

### Step 3: Program Auto Answer

- Press **8**, \*, (1 or 2) (Auto Answer 1=ON, 2=OFF)

### Step 4: To End Programming

- Slide S15 to 1 and press the red **ON/OFF** key

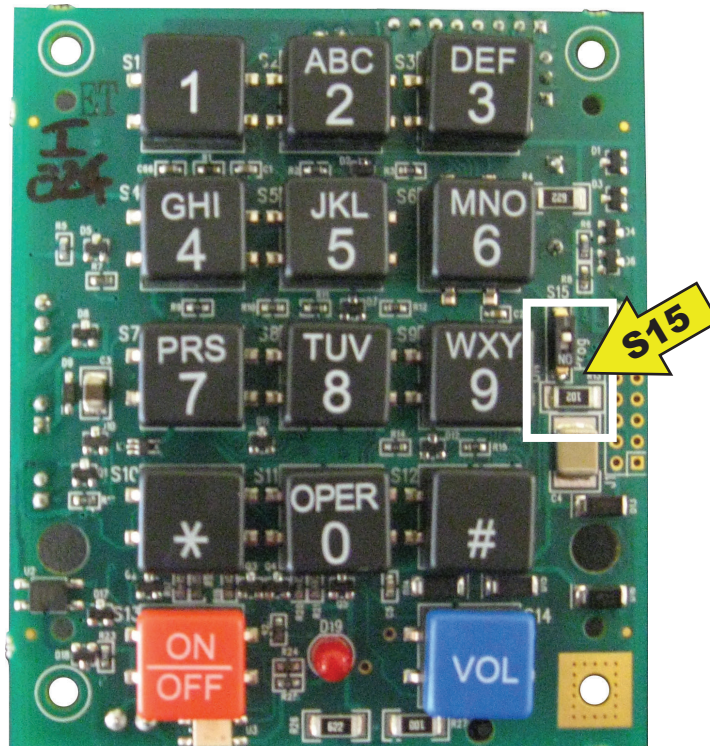

If the phone turns off during programming, it is because many Telco lines and PBX systems provide a limited amount of time to program the phone. In these cases, it is imperative to quickly move through the phone programming. A template is offered below to assist in programming the first emergency button.

**Tip 1: To program a phone where multiple numbers or auto answer is to be programmed, follow these steps:**

1. Press the red **ON/OFF** key, then dial a number such as your cell phone. Answer the cell phone and do not hang-up the call.
2. Slide S15 to **ON/Prog**.
3. Perform all the programming steps on page 1.
4. When programming is completed, slide S15 to 1.
5. Press the **ON/OFF** key to hang-up the call to your cell phone.

**Programming Template**

1. Fill in the emergency phone number in the spaces provided in step 2.
2. Then follow the directions provided in Step 1.

Step 1. Press the red **ON/OFF** key, then slide S15 to **ON/Prog**.

Step 2. Press **1, \*, \_\_\_\_\_, VOL Key**